



BATHBONDS

THE PERMANENT REPAIR KIT
FOR TUBS & SHOWERS

PROUDLY MADE IN THE USA

BATHBONDS BATHUB & SHOWER INLAY INSTALLATION INSTRUCTIONS

www.bathbonds.com | bathbonds@gmail.com

ADDITIONAL TOOLS NEEDED (NOT SUPPLIED)

BATHBONDS J-Roller*
2-inch Masking Tape
Sander with 60 grit sandpaper hand sandpaper

Paper towels
Denatured Alcohol, Acetone or Lacquer Thinner
Razor knife

*available for purchase on www.bathbonds.com

RELEASE TAPE ON INLAY CAREFULLY AND LAY FLAT TO FIT PRIOR TO JOB.

IMPORTANT: WORK AREA NEEDS TO BE WELL VENTILATED. WEAR RESPIRATOR OR N95 MASK.

CAUTION: AVOID CONTACT OF ADHESIVE WITH EYES.

1. Clean entire tub or shower floor bottom and up 6" on sides. Dry completely.



2. Position the inlay on the bottom of tub/shower and adjust to its final location.



Image has been enhanced to accurately represent this step in the inlay installation process.

3. Place a row of masking tape around the entire inlay perimeter, leaving about 1/2 inch of the tub bottom exposed between tape and inlay.



Note the space between inlay and the first line of tape. This is for positioning of the inlay on the bottom of tub.

4. Remove the inlay and place a second row of tape inside and overlapping the first.



5. Fold some tape over itself to make double-sided tape, and place 2 or 3 tape rolls on the bottom of the inlay and place the inlay back into the tub.



6. Hold the inlay to prevent it from moving and use the knife to cut through the tape right along the edge of the inlay around the entire perimeter.



NOTE: Make sure you cut completely through the tape to ensure a clean line around the inlay.


7. Remove the inlay, the tape from the bottom of the inlay, and the tape from the inside of the cut perimeter (under where the inlay was).



8. Sand bottom of tub (stay inside the taped area); sanding all gloss, silicone, or debris from inside work area.



9. Vacuum all debris from sanding and wash the bottom of the tub or shower with solvent .

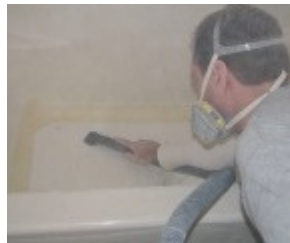

10. Put on gloves and mix together parts A and B of adhesive (1:1 ratio) into supplied container. Mix thoroughly. (Appx. 1 minute)

YOU HAVE A MAXIMUM OF 20 MINUTES TO WORK WITH ADHESIVE ONCE IT IS MIXED!






11. Pour out mixed adhesive on bottom of tub and (using supplied spreader) spread evenly across your prepared working area (approx. 1/8 inch thick coating).



12. Holding at both ends, first place the center of the inlay down in tub, followed by the ends and adjust to the permanent location.



13. Using J-roller, roll on top of the inlay, starting at the center and out toward the edges, in a pie shape all the way around.

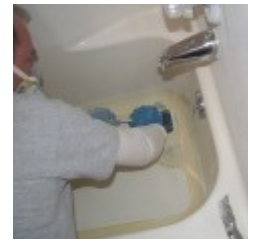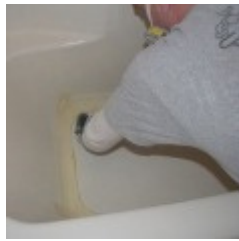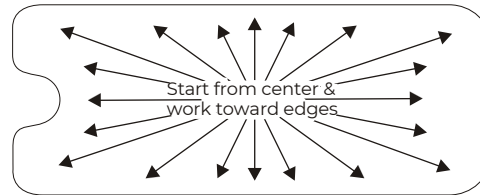


**YOU SHOULD HAVE A SOLID BEAD OF ADHESIVE AROUND THE EDGE OF THE INLAY.
BE CAREFUL NOT TO PICK UP ADHESIVE ON THE ROLLER DURING THIS STEP!**

14. Push excess adhesive bead away from the inlay onto tape, using a clean edge of the spreader or another clean flat-edged product.



NOTE: To remove a larger amount of excess glue you may use a squeegee or spreader if you have one available.

15. Roll inlay surface again, now moving across the length and width of the unit.

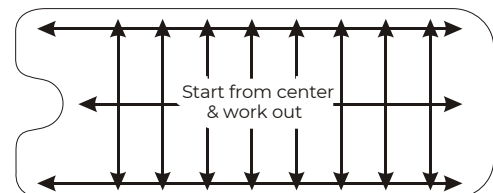

16. Carefully Remove the masking tape and discard.


Remove excess adhesive, first with dry paper towels, then with solvent paper towels.

BE SURE TO REMOVE ALL EXCESS ADHESIVE FROM INLAY AND TUB SURFACE. ADHESIVE CAN ETCH TUB OR TOP OF INLAY IF LEFT ON FOR TOO LONG!




NOTE: When discarding adhesive, use extra caution. Adhesive can melt through trash bags and cause damage to bath floor or other appliances. Use bucket provided and/or shipping box for discarding waste.

17. Roll around the entire edge of the inlay according to the figure.

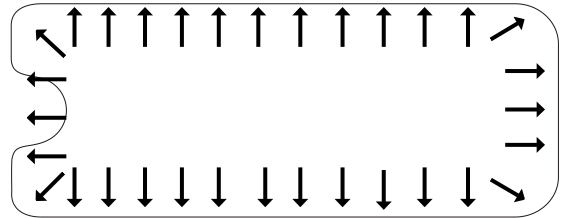

18. Do a final wash of unit to remove any remaining adhesive.

CAUTION: DO NOT OVERSATURATE PAPER TOWEL AS THIS WILL CAUSE SOLVENT TO POOL UNDER INLAY.

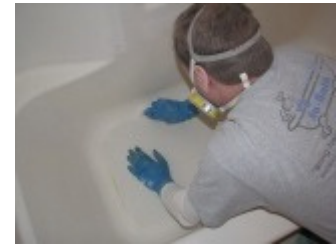

**CONGRATULATIONS!
YOUR BATHBONDS INLAY
INSTALLATION IS COMPLETE!**



IF YOU HAVE ANY QUESTIONS OR COMMENTS, PLEASE CONTACT US AT BATHBONDS@GMAIL.COM
WWW.BATHBONDS.COM